


Carbon Heating Film CampingVarme:

CampingVarme is a carbon heating film simple to install.

- Heating film is ready for connection. The installation can be done by anyone.
- A negligible effect on floor height, only 0,3 mm thick
- Heating film is installed directly on floors in caravan
- Carpets are laid directly on the heating film
- Maintenance free
- 10 year warranty

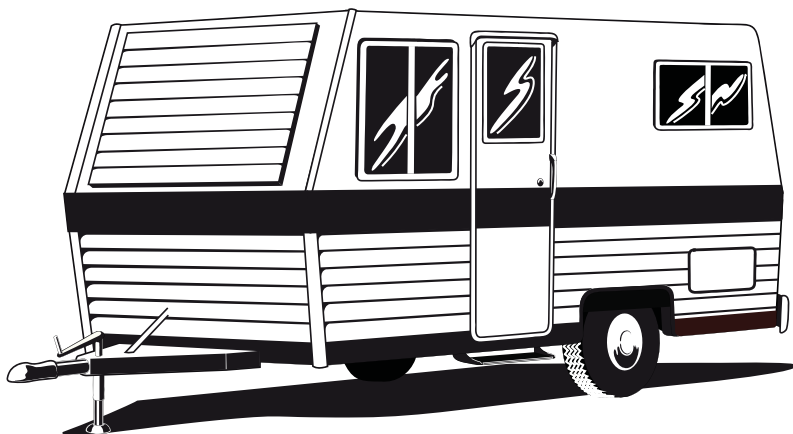

Please contact us for further information
or visit our website:

Dansk Varmekabel A/S

Lundagervej 102
DK-8722 Hedensted
Danmark
Tel: +45 7675 8030
Fax: +45 7675 8032
www.handyheat.net
info@handyheat.net



HANDYHEAT®

DANSK VARMEKABEL A/S

CampingVarme Carbon Heating Film




Install floor heating system in your caravan and enjoy warm & comfortable floor!

Floor heating systems have become very popular. Not only because that in winter time cold floors are very uncomfortable. With CampingVarme you are getting warm floors in your caravan and best comfort.

CampingVarme is a carbon heating film, only 0,3 mm thick, based on heating elements that are composed of a uniformed carbon coating over a polyester film.

CampingVarme carbon heating film is installed directly on the floors in caravan. Direct contact with carpets gives a fast acting floor heating system.

Item number	Type
5707524963501	CV400-1 meter 0,4m ² , 32 Watt
5707524963518	CV400-2 meter 0,8m ² , 64 Watt
5707524963525	CV400-3 meter 1,2m ² , 96 Watt
5707524963253	CV400-4 meter 1,6m ² , 128 Watt
570752496310	PV-Kit, 2 x 6m extension cord
570752400005	Varme Tape 25 mm x 80 meter
570752400064	Transformer CT-300, 42 volt/300 VA


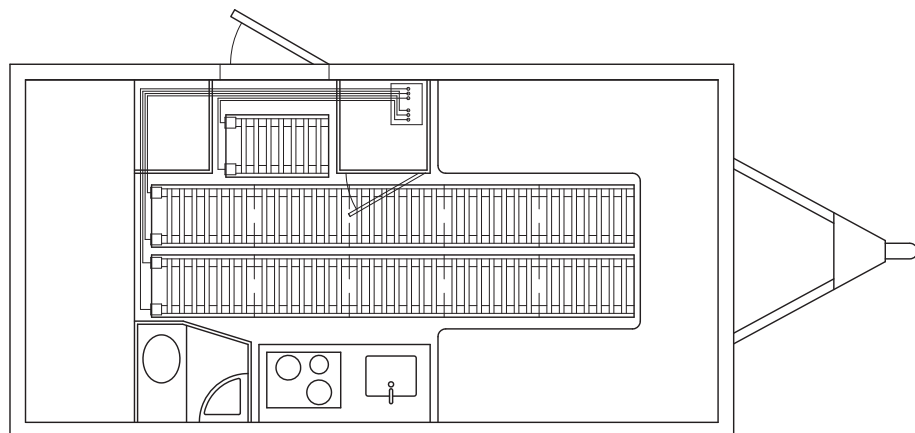


Installation of CampingVarme Heating Film


CampingVarme is produced in 4 lengths, 1 meter - 2 meter - 3 meter og 4 meter, with width of 400mm and output in 80 watt pr m2. The length of the film can be shortened by cutting it in the marked places.

Easy way to warm floor:


Put CampingVarme carbon heating film on the floors in the caravan. Fix the film with the double adhesive tape Varmetape.

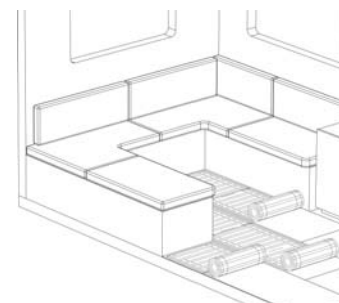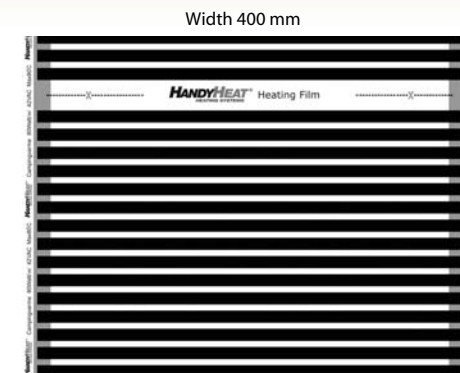

Put the carpets on the carbon heating film.

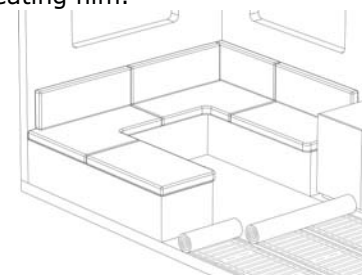

Cold cables are led to the transformer CT-300.

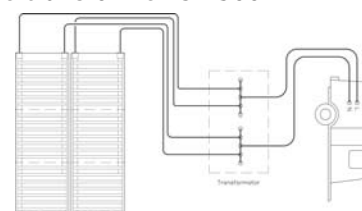

Connect the transformer to 230 Volt in the caravan.